

Saw-Bucket Motion Wildlife Deterrent

Dr Erik Johnson
drjohnson.com

Lightbulb to socket outlet
adapter POLARIZED



Motion
detector
floodlight

\$25 Black n Decker
Jigsaw 4-5 AMP
polarized plug.
Handle taped "ON"
position! NO BLADE.

The jigsaw goes in the bucket and you swap one of the light sockets for an outlet to plug it into. Tape the saw handle "ON" and then mount the light fixture on the side of the bucket with bolts. Straight wire the extension cord to the detector. Leave a bulb in for that surprise too. When the animal is detected the light comes on and the jigsaw jacks around in the bucket which scares the critter off.

(A) extension cord
wired to motion
detector light
(B) Is the jigsaw
plugged into the socket
adapter on the motion
detector.

Extension Cord